


# DYNAFLAIR

## ROLLING CLOSURE ELECTRIC OPERATOR EMERGENCY RELEASE INSTALLATION

CABLE WILL NOT TRAVEL IF KINKED OR TURNED TOO SHARPLY. PLEASE LEAVE APPROX. 1 CU. FT. SPACE TO ACCOMODATE... AND TEST WELL BEFORE FINISHING THE WALL AROUND THE PULL STATION!

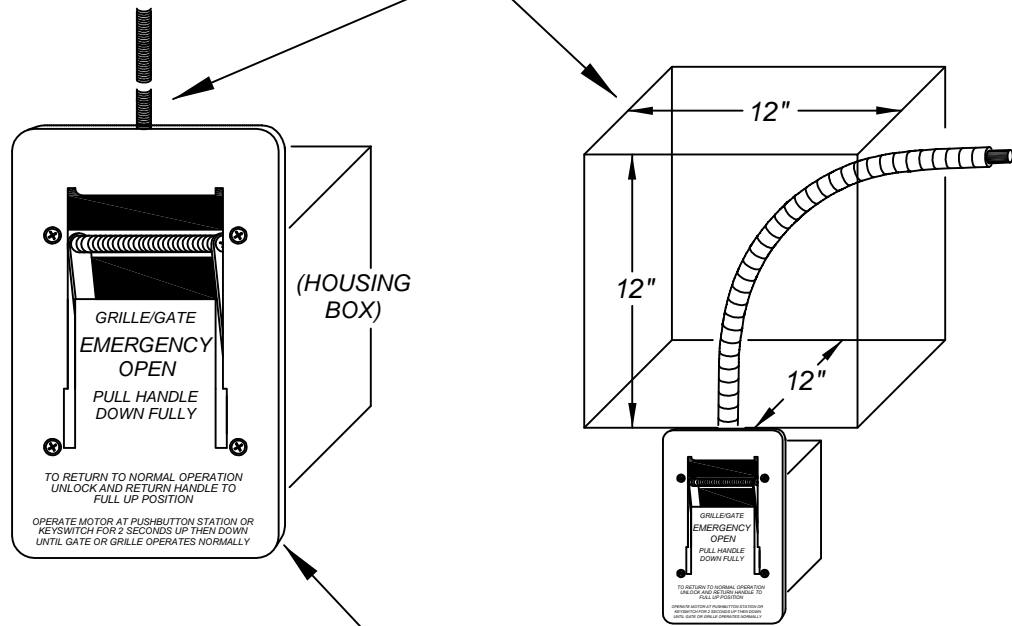

FACE PLATE MUST BE INSTALLED DIRECTLY TO THE HOUSING BOX BEHIND (AS SHIPPED) OR THE RELEASE WILL NOT WORK... LEAVE NO SPACE BETWEEN THEM!

